



Hand Starting Valve

* not illustrated

Item	Description	NO
1*	Hand Starting Valve complete	14.70.00
2	valve body	14.70.01
3*	Air Supply Valve complete	14.70.02
4	valve case	14.70.03
5	spring	17.10.22
6	ball	14.70.05
7	gasket ring A 24 x 30 (copper)	3.10.08
8	valve seat nipple	14.70.07
9	gasket ring A 16 x 20 (copper)	14.70.08
10	grooved rubber seal ring 10 x 18	14.70.09
11	stop ring	14.70.10
12	pressing rod	14.70.12
13	threaded guide ring	14.70.13
14	valve seat	14.70.14
15	seal supporting ring	14.70.15
16	gasket ring A 22 x 27 (copper)	7.10.11
17	screw adapter	14.70.17
18	control piston with valve ball	14.70.18
19	stop washer	14.70.19
20	valve spring	14.70.20
21	spring rest disk	14.70.21
22	adjusting shim	14.70.22
23	spring cap	14.70.23
24	hand lever with ball knob (item 25)	14.70.26
25	ball knob for 14.70.26	14.70.27
26	bolt with washer and split pin	14.70.28
27	screw plug M 8 x 12	14.70.35
28	gasket ring A 8 x 14 (copper)	5.11.03
29	screw plug AM 12 x 1,5	14.70.37
30	gasket ring A 12 x 16 (copper)	14.70.38
31	hollow screw A 6	14.70.39
32	ring nipple B 6	14.70.50
33	pipe hand starting valve > air distributor	14.50.15
34	pipe locking valve > hand starting valve	14.50.12
35	pipe startingvalve > starting latch	14.50.13
36	pipe air pressure reducer > hand starting valve see 15.00.00	
37	sheet metal holder	14.70.51
38	washer	14.70.52
39	lock washer A 8	14.70.53

