



**Starting air assembly**

\* not illustrated

Item	Description	NO
1*	starting air assembly	15.00.00
2	starting air pipe for pressure	15.01.20
3	pipe cock valve "Schmölle"	21.01.15
4	tank drainage complete without riser	15.10.00
5	housing without riser	15.10.11
6	gasket	15.10.13
7	valve spindle with handle	15.10.14
8	cylindrical screw AM 4 x 10	15.10.15
9	lock washer A 4	17.10.39
11	screw adapter with riser	15.11.00
12	housing with riser	15.11.01
13	screw adapter	15.15.02
14	gasket ring A 14 x 18 (copper)	3.11.08
15	gasket ring A 22 x 27 (copper)	7.10.11
16	air distributor complete	15.15.05
17	housing	15.15.06
18	screw plug M 14 x 1,5	15.15.03
19	gasket ring A 12 x 18 (copper)	1.11.05
36	power check valve complete	15.22.00
37	housing without tube	15.22.01
38	valve seat	17.10.41
39	ball	17.10.38
40	spring	17.10.22
41	ball case	15.22.02
42	screw adapter	15.22.03
43	gasket ring A 30 x 36 (copper)	1.10.07
44	union nut M 16 x 1,5	3.10.10
45	union nipple	3.10.11
46	Absperrventil siehe unter 21.01.17	
47	Druckminderer siehe unter 26.14.20	
48	air pipe-starting air loading valve to air distributor for connection of loading assembly	15.23.02
49	air pipe - air distributor to cock valve	15.23.03
50	air pipe - pressure reducing valve to hand	15.23.05

