



## Pressure reducing valve \* not illustrated

Item	Description	NO
1	Pressure Reducing Valve	26.14.20
2	reducing valve body	26.10.01
3	pressure pin plate	26.10.02
4	diaphragm membrane	26.10.03
5	membrane slide ring	26.10.04
6	pressure ring for diaphragm membrane	26.10.05
7	spring cap	26.10.06
8	diaphragm piston	26.10.07
9	spring	26.10.08
10	spring seat	26.10.09
11	adjusting screw	26.10.10
12	lock nut	26.10.11
13	valve piston with soft seat	26.10.12
14	spring seat	26.10.13
15	valve spring	26.10.14
16	safety valve complete with item 17 and 18	26.14.16
17	valve plate with soft seat	26.14.17
18	pressure piece for 26.14.16	26.14.18
19	tubular intermediate piece	26.14.02
20	union screw R 5/8"	26.14.03
21	filter inset	26.10.22
22	o-ring 11 X 2,5	26.14.04
23	screw adapter R 3/8"	26.20.24
24	tubular intermediate piece M 16 x 1,5 R 3/8"	26.14.07
24a	tubular intermediate piece M 18 x 1,5 / M 20 x 1,5	26.14.19
25	union nipple for 15.23.05	26.11.01
26	union nut R 3/8"	26.11.02
27	pressure gauge 63 O x 100bar R 1/4"	26.12.01
28	pressure gauge 63 O x 400bar R 1/4"	26.12.02
29	gasket ring	26.12.03
30	lock stopper R 1/4"	26.13.01
31	screw adapter R 1/4"	26.13.02
32	union nipple for tube 6 x 1	26.13.04
33	union nut R 1/4"	26.13.05

